


## AL-2108p bridging instructions

1. If you could please log on to the configuration page of the modem.
2. If you can click on 'Bridging' tab
3. If you can make sure under 'features' all the options are enabled. As shown

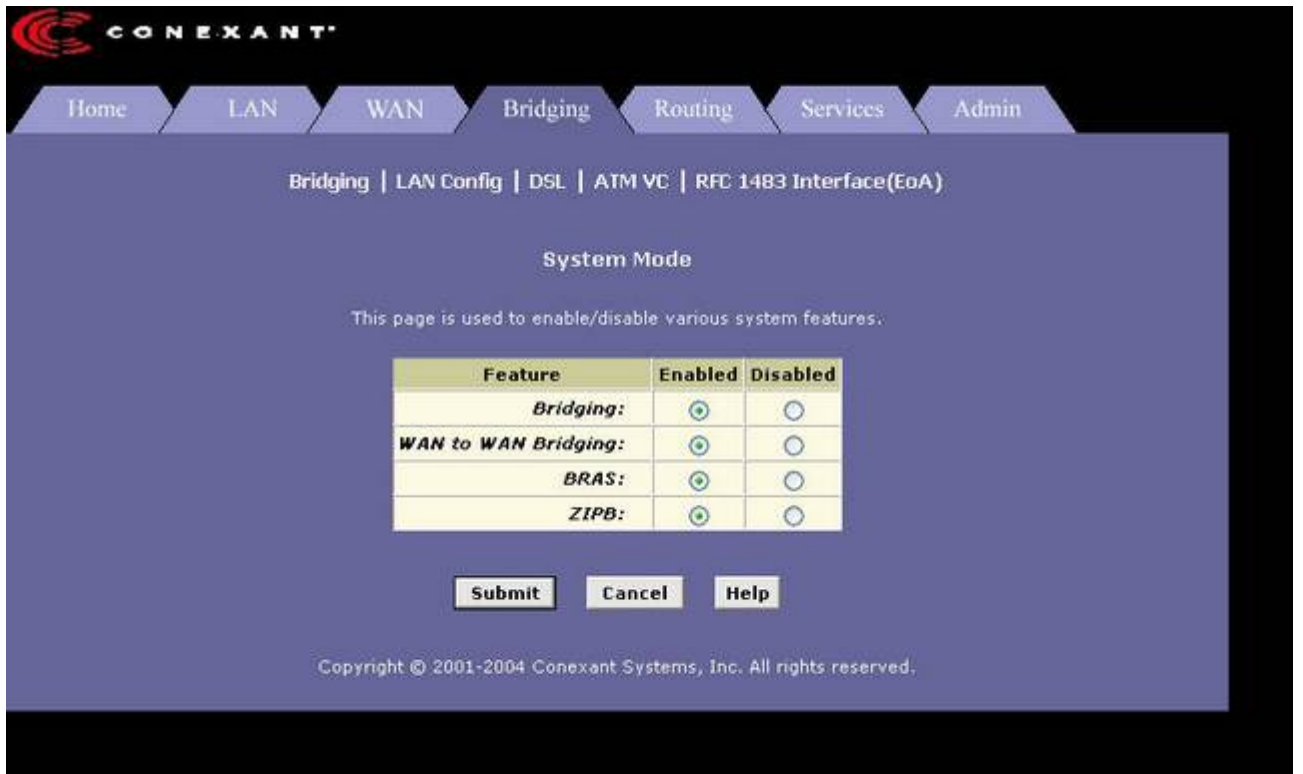

4. If you then click on 'submit'
5. Then if you could please renew the IP Address.

That's it, the AL2108 should now be in bridged mode.