

How to enable or disable the firewall?

The image shows a network configuration interface with a sidebar on the left and a main configuration area. The sidebar contains a tree view with the following items: LAN Setup, LAN Configuration, Ethernet Switch, Firewall/NAT Services, WAN Setup, New Connection, Modem, BT, and Save All. The main area is titled 'PPPoA Connection Setup' and contains the following fields and options:

- Name: BT
- Type: PPPoA
- Sharing: Disable
- Options: NAT Firewall
- VLAN ID: 0
- Priority Bits: 0
- Encapsulation: LLC VC
- Username: DSL020847@f2s.c
- Password: [masked]
- Idle Timeout: 60 secs
- Keep Alive: 10 min
- Authentication: Auto CHAP PAP
- MTU: 1500 bytes
- On Demand: Default Gateway:
- PPP Unnumbered:
- LAN: LAN group 1
- Auto PVC:

At the bottom of the main area are buttons for 'Connect', 'Disconnect', 'Apply', 'Delete', and 'Cancel'. Below the main area is a confirmation dialog box with the text 'Are you sure you want to save all the current setting ?' and buttons for 'Save All' and 'Cancel'.

1. Click on 'Config'.
2. Tick the box to enable the firewall or un-tick the box to disable the firewall.
3. You must re-enter the password.
4. Click on 'Apply' button to submit the changes.
5. 'Save All'.
6. Click on 'Save All' button to complete the process .