

1. Click on 'Advance'.

HOME EZ SETUP CONFIG **ADVANCED** TOOLS STATUS

UPnP

To enable UPnP, check the Enable UPnP box and select a connection below.

Enable UPnP

WAN Connection: BT

LAN Connection: LAN group 1

Apply Cancel

2. 'Port Forwarding'.

3. 'Enable Upnp.'

4. Click on 'Apply' button.

5. 'Save All'.

Are you sure you want to save all the current setting ?

Save All Cancel

6. Click on 'Save All' button to complete the process .