

XG-2180 Wireless Enable/Disable

You enable or disable the wireless.

To enable or disable the XG-2180's wireless functions. Please follow the instructions below:

Router Setup

Setup Wizard
LAN
Wireless
Password
Status
▼ Advanced
▼ Administration
Log Out

Wireless

Identification

Station Name: SCA4C6E2
Region: — Select Region —
SSID (Service Set Identifier): default

Options

Mode: g and b
Channel No: 11
 Broadcast SSID
WEP data encryption: Off

Access Point

Enable Access Point
Allow **LAN** access by:
 ALL Wireless stations
 Selected Wireless stations only
Allow **Internet** access by:
 ALL Wireless stations
 Selected Wireless stations only

Select Stations

Save Cancel Help

1. Click on 'Wireless'

2. Tick the box 'Broadcast SSID' at least for the initial set up. This will allow the wireless client to see the name of Access Point (default), and then you can click on the name to establish the connection. By untick the box you disable the broadcast of the SSID, The SSID will disappear the name of your Access Point will not be seen by other user. Since it is hidden from other user. This will give you an added security.

3. Tick the box 'Enable Access Point' By untick the box you will stop the wireless side of the Router functioning.

Once the connection is established successfully, an IP address should appear on the Router's home page in the Internet section (as shown in the picture below). You should be connected to Internet, and now you can test it by browsing the Internet.

The screenshot shows a Microsoft Internet Explorer browser window with the title 'Setup - Microsoft Internet Explorer'. The address bar contains 'http://192.168.0.1/home.htm'. Below the browser window, the Router Setup page is displayed. The page has a dark sidebar on the left with the following menu items: Router Setup, Setup Wizard, LAN, Wireless, Password, Status, Advanced, and Administration. A 'Log Out' button is located at the bottom of the sidebar. The main content area is titled 'Wireless Router' and displays the following configuration details:

SCB8CB2A		
Internet:	IP Address:	62.3.255.173
	Connection:	DHCP
Wireless:	SSID:	default
	WEP:	Off
LAN:	IP Address:	192.168.0.1
	DHCP Server:	ON